



“The Home for all your Phone and Low Voltage Needs”

---

## Samsung Instructions: Date & Time Set-Up

---

1. While on-hook, press **TRSF** and then dial **200**. Your display shows: ENABLE CUS.PROG. PASSCODE.
2. Dial the four digit passcode (**1 2 3 4**). The display shows: ENABLE CUS.PROG. - DISABLE.
3. Dial **1** to enable. The display shows: ENABLE CUS.PROG. - ENABLE.
4. Press **SPEAKER** and then dial **505**. Display shows Old: and New:
5. Enter the new time and date using the following format (re-enter each field as prompted, even if you only want to change the time).

The display format is as follows:

**W** (Day of the week): Enter **0** for Sunday and **6** for Saturday

**MM** (Month): Enter **01** for January and **12** for December

**DD** (Day of the month): Enter a number in the range of **01 - 31**

**YY** (Year): Enter the last two digits of the year

**HH** (Hours): Use the 24-hour clock and enter a number in the range of **00 - 24\***

**MM** (Minutes): Enter a number in the range of **00 - 59**

*\*Failure to enter the time using the 24-hour clock will cause the date to change at 12:00 p.m.*

6. Verify the time and date and re-enter them if necessary.
7. Press **TRSF** to store and exit programming.

If you have entered invalid data, you will receive an (**INVALID ENTRY**) message for three seconds. Re-enter the correct date and time. If the information you entered is incorrect, repeat the procedure.